


880mA @ 12VDC
440mA @ 24VDC



PRINT TO SCALE!

Nevis2 - High Intensity Engine Room Light

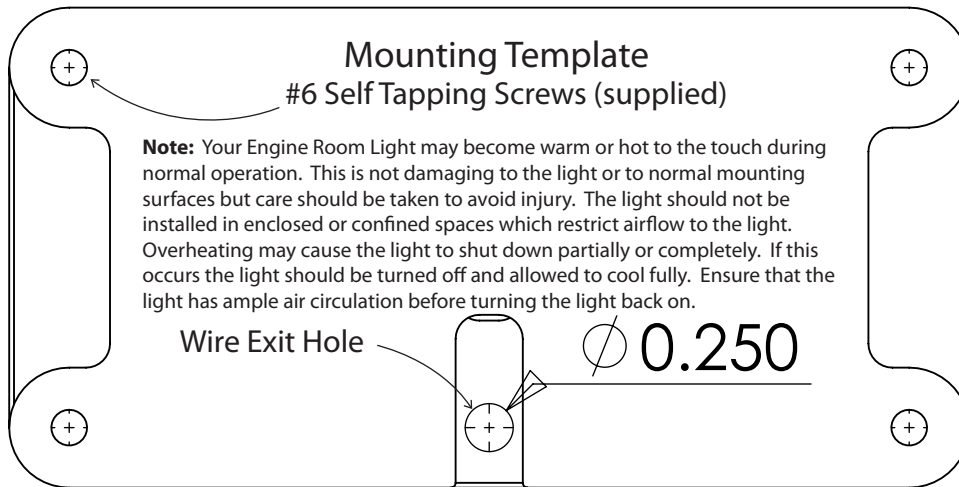

Note: Your Engine Room Light may become warm or hot to the touch during normal operation. This is not damaging to the light or to normal mounting surfaces but care should be taken to avoid injury. The light should not be installed in enclosed or confined spaces which restrict airflow to the light. Overheating may cause the light to shut down partially or completely. If this occurs the light should be turned off and allowed to cool fully. Ensure that the light has ample air circulation before turning the light back on.

Light circuits should be protected with an appropriately sized fuse. Each light draws approximately 880mA at 12VDC and 440mA at 24VDC. Fuses on circuits with multiple lights should be sized accordingly.

Thank you for purchasing the Engine Room Light. This light utilizes Lumitec's proprietary technology to cast a broad, even light over a wide area in a color optimized for easy viewing and reduced eye fatigue.

Installation Instructions:

1. Select mounting location. Use the template below to for mounting hole location and wire exit location. If you choose to run the wires along the mounting surface, disregard the wire exit hole location on the template. Select a mounting height and location best suited to your particular needs.
2. Securely mount and position the light using the mounting hardware provided.
3. Establish the electrical connections per ABYC guidelines. Device is polarity sensitive. Light draws approximately 880mA at 12VDC, 440mA at 24VDC. Ensure that gauge of the power wires and the fuse configuration are appropriate for the specific installation. For optimal performance and reliability, Lumitec recommends a completely sealed wire to wire connection, such as an adhesive-lined butt connector.

Functionality: **2-COLOR OPERATION WITH DIMMING!**

Note that the light ramps in intensity over a period of about 3 seconds on startup. With no interruption of this ramp the light will achieve and maintain full intensity. To enable a "dimmed mode" simply interrupt the ramp in intensity with a brief off/on toggle of the power. This allows the intensity to be set anywhere from a soft glow to full power. A subsequent off/on toggle will allow the light to change colors.

Limited Warranty

Lumitec is not responsible for product failure caused by abuse, neglect, improper installation, or failure in applications other than those for which it was designed, intended, and marketed.

This product is warranted to be free from defects in workmanship and materials for a period of one year from the date of original purchase. Should your Lumitec product prove defective during the warranty period promptly notify Lumitec and return product with freight prepaid. Lumitec will, at its option, repair or replace the product without charge for parts or labor, or refund purchase price. Products repaired or replaced under this warranty shall be warranted for the unexpired portion of the warranty applying to the original product(s). Lumitec is not responsible for product failure caused by abuse, neglect, improper installation, or failure in applications other than those for which it was designed, intended, and marketed. No warranty or affirmation of fact, express or implied, other than as set forth in the limited warranty statement above is made or authorized by Lumitec. Any liability for consequential and incidental damages is expressly disclaimed. Lumitec liability in all events is limited to, and shall not exceed, the purchase price paid.

Lumitec, Inc.
1405 Poinsettia Drive, Suite 10
Delray Beach, FL 33444
www.lumiteclighting.com

part # 964012-01